

Cookie Mouse



This is
Cookie Mouse
fully assembled.





If you have
any questions or
problems please call
Costume Specialists
at
1-800-596-9357

- ☐ This costume is designed to be worn by someone of an average build and approximately 5'2" to 5'6" tall.
- The wearer ought to be of reasonable strength and stamina.
- ☐ T-shirt and shorts are best worn under the costume. It's advisable that the wearer drink plenty of liquids before and after the event.
- ☐ The costume must be worn WITHOUT shoes.
- Be sure to have a dress rehearsal. It takes two people about 10 to 15 minutes to put on the costume. Becoming comfortable in the costume before the event will insure the best performance.
- □ Have Fun!!

Cookie Mouse



This is
Cookie Mouse
Parts List



Overall's



2 Pr. Mitts



Parade Feet



Cookie Mouse's Head



Cookie



Backpack



Santa Hat



Fur Shirt



Removable Ear's



Tail

Additional Parts not shown:
Shoe Bag
Cleaning Instructions

Cookie Mouse





Attach the Ears to the Head. Slide each of the 3 Velcro strips connected to each Ear through the matching holes in the top and sides of the Head.

PLEASE NOTE:

To prevent permanent damage to the Head and Ears, please remove the Ears before packing and shipping.



Reach inside the Head and fasten the Velcro strips to the corresponding Velcro inside the Head.



3 Optional Santa Hat:

Using the openings closest to the center of the Head, secure the Hat the same way you did the Ears.



A Slide the Tail through opening in the back of the Overalls. Secure in place with the Velcro.



5 Put on the Shirt. Zip up the back.



6 Put on the Overalls. Fasten the straps.

Cookie Mouse





Put on the Parade Feet making sure the wearer's foot is in the inner sandal.

Pull the inner sandal's laces tight and slide the toggle down.

Secure the ankle straps.



Fasten the Velcro up the back of the Parade Feet.



Adjust the length of the Overalls by turning the cuff under and snapping it to the appropriate position on the snap tape running up the leg.



10 Locate the orange fabric covered Cooling Fan switch inside the Head. Turn the Cooling Fan on and off by pressing the Red button.

BE SURE TO TURN OFF THE FAN AFTER YOUR EVENT



1 1 Put on the head and secure the chin strap.

PLEASE NOTE:

If the Head does not fit comfortably or visibility is poor, headgear adjustments can be made now.

Before adjustments:
Remove the headgear by
pulling it free off the Velcro
located inside of the Head.



HEADGEAR ADJUSTMENTS:

Remove the Headgear by pulling it free from the Velcro.

Locate the straps attached to the front and back of the Headgear. Each can be adjusted by repositioning the Velcro.

Cookie Mouse





HEADGEAR ADJUSTMENTS:

Adjust the chin strap by repositioning the Velcro. Reseat the Headgear in the Head.

NOTE:

The angle at which the Headgear is seated will also change the comfort and visibility.



1 2 Attach the Velcro on the front and back of the Head to the matching Velcro on the chest and back of the Shirt.



13 Help the wearer put on the Mitts.

Tuck each cuff up into the Shirt sleeves.



14 Help the wearer put on the Backpack.



15 Cookie Mouse is now ready to entertain with Backpack!



16 Cookie Mouse is now ready to entertain with Santa Hat!