

## Arnie the Doughnut





- This costume is designed to be worn by someone of an average build and approximately 5'4" to 5'8" tall.
- The wearer ought to be of reasonable strength and stamina.
- Shorts and a T-Shirt are best worn under the costume. It's advisable that the wearer drink plenty of liquids before and after the event.
- The costume must be worn WITH "street" shoes.
- Be sure to have a dress rehearsal. It takes two people about 10 to 15 minutes to put on the costume. Becoming comfortable in the costume before the event will insure the best performance.
- Have Fun!!

## Arnie the Doughnut



PLEASE NOTE THAT YOUR COSTUME REQUIRES SPECIAL PACKING. SEE THE INSTRUCTIONS FOLLOWING THE WEARING INSTRUCTIONS.

This is

Arnie the Doughnut's

Parts List



2 BSC Fans (located in the Body)



Electrical Vest

## Body



1 pr Shoe Bases



2 Endura Batteries and VL-2 Charger

# ADDITIONAL ITEMS NOT PICTURED:

- Y-Cable (located in Body )
- 2 Body Hoops (located in Body)
- Frame Extension
- V-Mount (located in Electrical Vest)
- 2 Dust Bags
- Charger Bag
- Cleaning Instructions

# Arnie the Doughnut





1 Check the inventory.

Be sure the Batteries are fully charged.



2 Insert a fully charged Battery onto the V-Mount Plate.

Secure the V-Mount Plate inside the pocket on the back of the Electrical Vest, allow the Power Cord to hang out of the bag.



3 Put on the Electrical Vest.

Clip the clips closed in the front and adjust straps as needed.



4 Reach into the Costume leg and find the elastic cuff.

Step into the cuff so that the top elastic sits at the knee, and the bottom elastic is secure at the ankle.



5 While the wearer holds the Body off of the floor, help him/her step onto the Shoe Bases.

Secure velcro straps across the wearer's feet.



6 Starting with the center front of the Shoe Base; line up the velcro on the foot attached to the Body to the Shoe Bases.

This should be a snug fit.

## Arnie the Doughnut





Center the Frame Extension on the Velcro "Clutchie". Secure the Velcros.

THE WEIGHT OF THE BODY SHOULD <u>NOT</u> REST ON THE FRAME EXTENSION. IT IS THERE TO STABLIZE THE BODY.



Plug the V-Mount into the Y-Cable.

The Fans should begin to run.

If not, check the connections or try another Battery



9Holding the Frame Extension, pull the Costume over the wearers head.

Slide the Frame Extention into the pipes on the back of the Electrical Vest.



10 Zip the Body closed. Let it inflate.

Inflation takes approximately 45 seconds.



Arnie the Doughnut is ready to entertain!

Once the costume is inflated, have the wearer check the visibility.

The best visibility can be achieved by adjusting the height of the Frame Extension.

If the viewing area is too high, lower the Frame Extension by moving the pegs down the Pipes.

If the viewing is too low, raise the Frame Extension by moving the pegs up the Pipes.

# Figure Eight Storage Instructions for Arnie the Doughnut





1. Place the character upside down on the ground and locate the legs of the character.



2. Tuck the legs and arms together in the center of the body.



**3.** Grasp the edges of the hoop with an "over-under" placement of your hands.



4. Twist with one hand and push with the other hand so the hoop doubles over ontop of itself like a figure eight.



**5.** Place the now compact costume into the dust bag.