

Wearing Instructions For

Christmas Billboard





- □ This costume is designed to be worn by someone of an average build and approximately 5'2" tall.
- □ The wearer ought to be of reasonable strength and stamina.
- □ T-shirt and shorts are best worn under the costume. It's advisable that the wearer drink plenty of liquids before and after the event.
- □ The costume must be worn WITHOUT shoes.
- Be sure to have a dress rehearsal. It takes two people about 10 to 15 minutes to put on the costume. Becoming comfortable in the costume before the event will insure the best performance.
- □ Have Fun!!

Wearing Instructions For Christmas Billboard





Electrical Vest



2 Endura Batteries and VL-2 Charger



2 BSC Fans(located in the Body)



Body



Gloves



Shoe Bases



Front Cover



Back Cover

ADDITIONAL ITEMS NOT PICTURED:

- V-Mount (located in Electrical Vest)
- Y-Cable (located in Body)
- Waist Snap Hoop (located in Body)
- Dust Bag
- Shoe Bag
- Charger Bag
- Cleaning Instructions
- Shipping Trunk

Wearing Instructions For Christmas Billboard





1 Check the Inventory. Make sure the Batteries are fully charged.

On the side of the Battery is a button push in to indicates how much life is left in the Battery.



2 Insert a fully charged Battery into the V-mount Plate. Slide the Battery into the pocket on the back of the Electrical Vest. Fasten the bag closed, allowing the Power Cord to hang out of the right side of the bag.



3 Put on the Tights, Elf Shoes and Gloves.



4 Put on the Electrical Vest and clip around the chest.



5 Plug the Power Cord on the Electrical Vest into the Y-Cable located in the Body. The fans should begin to run.



6 Pull the Costume over your head. Have an assistant help you.



Wearing Instructions For Christmas Billboard



7 Inside the Costume there are two straps at each armhole. Once inside the Costume, clip these straps together and put over back of neck. These straps help hold the weight of the Costume. Adjust the straps to achieve the appropriate height.



Pull the Skirt of the Costume up to your waist and tighten the drawstring. Put your arms into the sleeves. The Costume should begin to inflate. Inflation takes approximately 45 seconds.



9Clip the Front Cover to the Body at the shoulders.



10Clip the Back Cover to the clips on the Body at the shoulders. Clip the Front Cover to the Back Cover under each arm.



11 Christmas Billboard is now ready to entertain!