



Wearing Instructions For **Christmas Drum**



Costume Specialists

This is
Christmas Drum
fully assembled.



If you have
any questions or
problems please call
Costume Specialists
at
1-800-596-9357

- This costume is designed to be worn by someone of an average build and approximately 5'2" to 5'10" tall.
- The wearer ought to be of reasonable strength and stamina.
- T-shirt and shorts are best worn under the costume. It's advisable that the wearer drink plenty of liquids before and after the event.
- The costume must be worn WITHOUT shoes or with a small shoes.
- Be sure to have a dress rehearsal. It takes two people about 10 to 15 minutes to put on the costume. Becoming comfortable in the costume before the event will insure the best performance.
- Have Fun!!

Wearing Instructions For **Christmas Drum**



This is
Christmas Drum's
Parts List!



Backpack



Body



Pants

ADDITIONAL ITEMS NOT PICTURED:

- V-Mount (located in
- Backpack)
- Y-Cable (located in Body)
- Dust Bag
- Shoe Bag
- Charger Bag
- Cleaning Instructions
- Shipping Trunk



2 Endura Batteries and
VL-2 Charger



Shoe



1 Fans (located in the
Body)

Frame Extension



Wearing Instructions For Christmas Drum



1 Check the Inventory. Make sure the Batteries are fully charged.

On the side of the Battery is a button push in to indicates how much life is left in the Battery.



2 Insert a fully charged Battery into the V-mount Plate. Slide the Battery into the pocket on the back of the Backpack. Fasten the bag closed, allowing the Power Cord to hang out of the right side of the bag.



3 Insert Frame Extension into pipes on back of Backpack.



4 Adjust height of Costume by inserting the Pins on the Backpack into the Pipes, through the Frame Extension. This step may need to be repeated once inside the Costume.



5 Put on Pants. Put on Backpack and clip around hips. Adjust to fit comfortably.



6 Put on Shoes. Tuck Pant leg into Shoes.

Wearing Instructions For Christmas Drum



7 Plug Fan into the Power Cord on your Backpack.



8 Pull Costume over wearer and Backpack.



9 Once inside, attach the top of the Frame Extension to the velcro tabs in the top of the Costume.



10 Pull the skirt of the Costume up into the Costume. Tighten the drawstring around your waist. The Costume should begin to inflate.

Inflation takes approximately 45 seconds.



11 Christmas Drum is now ready to entertain!