

Wearing Instructions For CHRISTMAS ELF





- ☐ This costume is designed to be worn by someone of an average build and approximately 5'2" to 5'8" tall.
- ☐ The wearer ought to be of reasonable strength and stamina.
- ☐ T-shirt and shorts are best worn under the costume. It's advisable that the wearer drink plenty of liquids before and after the event.
- ☐ The Costume can be worn WITH OR WITHOUT shoes.
- Be sure to have a dress rehearsal. It takes two people about 10 to 15 minutes to put on the costume. Becoming comfortable in the costume before the event will insure the best performance.
- □ Have Fun!!

Wearing Instructions For CHRISTMAS ELF








Electrical Backpack



Body



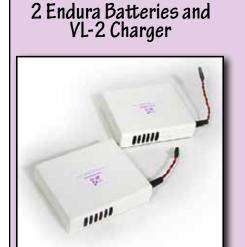

2 BSC Fans (located in the Body)



1 Pr. Gloves



1 Pr. Socks



1 Pr. Shoe Covers



1 Pr. Shoe Bases

ADDITIONAL ITEMS NOT PICTURED:

- V-Mount (located in Backpack)
- Y-Cable (located in Body)
- Waist Snap Hoop (located in Body)
- Set of 3 Support Straps (attached to Waist Hoop)
- Dust Bag
- Shoe Bag
- Charger Bag
- Cleaning Instructions
- **Shipping Trunk**

Wearing Instructions For CHRISTMAS ELF





1 Check the Inventory. Make sure the Batteries are fully charged.

On the side of the Battery is a button push in to indicates how much life is left in the Battery.



2 Insert a fully charged Battery into the V-mount Plate. Slide the Battery into the pocket on the back of the Backpack. Fasten the bag closed, allowing the Power Cord to hang out of the right side of the bag.



Put on Socks and pull over knees. Put on the Backpack and clip belt around hips. Adjust belt to fit comfortably.



Reach into the Costume leg and find the elastic cuff. Step foot into the cuff so that the top elastic sits at the knee, and the bottom elastic is secure at the ankle.



5 Inside the Costume there are three straps attached to the Hoop at the waist. Clip the two front straps to the top of the Backpack at the side.



6 Clip the back strap to the top of the Backpack at the center.

Wearing Instructions For CHRISTMAS ELF






Adjust the straps at the top of the Backpack to control the height and visibility of the Costume. This may have to be done once inside the Costume.



Put on Shoe Covers.

Let them rest around the ankles until the Shoe Bases are put on.

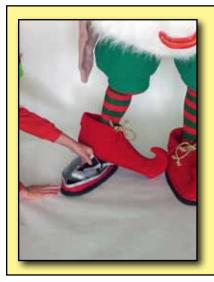

Place the wearer's foot into the Shoe Base. Secure the wearer's shoe in the sandal with the velcro.



1 OAttach the velcro on the Shoe Base to the velcro on the Shoe Cover, making sure to line up the center front and the center back. This should be a snug fit.



Plug the Power Cord on Backpack into the Y-Cable inside the Costume. The fans should begin to run.




12 Attach two parts of Body with zipper. Pull Costume over wearer and Backpack. Zip Costume and let it inflate. Inflation takes about 45 seconds.







13 Attach the Gloves to the Costume, over the hands.

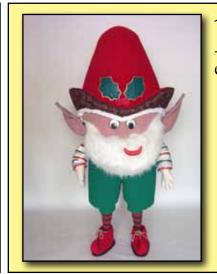

14 Christmas Elf is now ready to entertain!

Once the Costume is inflated, have the wearer check the visibility.

The best visibility can be achieved by adjusting the length of the Support Straps.

If the viewing area is too low, shorten the Support Straps which will raise the viewing area.

If the viewing is too high, lengthen the Support Straps which will drop the viewing area.