





- ☐ This costume is designed to be worn by someone of an average build and approximately 5'5" to 5'9" tall.
- The wearer ought to be of reasonable strength and stamina.
- ☐ T-shirt and shorts are best worn under the costume. It's advisable that the wearer drink plenty of liquids before and after the event.
- ☐ The costume must be worn WITH shoes.
- Be sure to have a dress rehearsal. It takes two people about 10 to 15 minutes to put on the costume. Becoming comfortable in the costume before the event will insure the best performance.
- □ Have Fun!!



This is
Easter Bunny's
Parts List



2 Endura Batteries and VL-2 Charger



Body



2 BSC Fans(located in the Body)

Backpack w/ V-Mount Bag



Shoe Bases

ADDITIONAL ITEMS NOT PICTURED:

- V-Mount (located in Backpack Bag)
- Y-Cable (located in Body)
- Waist Snap Hoop (located in Body)
- Set of 3 Support Straps
 (attached to Waist Hoop)
- 1 Dust Bags
- 2 Shoe Bags
- Charger Bag
- Shipping Trunk





1 Check the Inventory.
Make sure the
Batteries are fully
charged.



Insert a fully charged Battery onto the V-Mount Plate. Secure the Battery and zip the bag closed, allowing the Power Cord to hang out of the bag.



Put on the Backpack and clip the belt. The belt should rest comfortably on the hips.



Reach into the Costume leg and find the elastic cuff. Step foot into the cuff so that the top elastic sits at the knee, and the bottom elastic is secure at the ankle.



5 Place the wearer's foot into the Shoe Base. Secure the wearer's shoe in the sandal with the yelcro.



Attach the velcro on the Shoe Base to the velcro on the Costume, making sure to line up the center front and the center back. This should be a snug fit.





Tinside the Costume there are Three Straps attached to the Waist Hoop. Clip these straps to the top of the Backpack. Adjust the straps at the top of the Backpack to achieve the appropriate height. These straps hold the weight of the Costume.



Inside the Head there is a velcro tab. Attach the velcro on the Frame Extension to the velcro inside the Head.



9While inserting the Frame Extension into the head of the Costume, pull the Costume over the Backpack and the wearer.



10 Insert the Frame Extension into the pipes on the back of the Backpack. If the height of the Costume is not appropriate, insert the Pins into the holes on the pipes to achieve a taller height.



1 Plug the Power Cord on the Backpack into the Y-cable. The fans should begin to run.



12 Zip and velcro the Costume closed. Let the Costume inflate.

Inflation takes approximately 45 seconds.





13 Easter Bunny is now ready to entertain!

Once the costume is inflated, have the wearer check the visibility.

The best visibility can be achieved by adjusting the length of the Support Straps.

If the viewing area is too low, shorten the Support Straps which will raise the viewing area.

If the viewing is too high, lengthen the Support Straps which will drop the viewing area.

The Frame Extension should be raised and lowered, with the adjustments of the Support Straps, by moving the pegs up and down the Pipes.

BUT the weight of the Body should not be held by the Frame Extension.